

BOCCE BALL INSTALLATION

Installation Guidelines

Tools Required



- 1 Landscape Rake 2 Shovel 3 Stiff Bristled Broom 4 Hand Tamp 5 Seaming Tape 6 U-Notched Trowel
7 Seaming Adhesive 8 Hammer 9 Carpet Knife 10 Landscape Spikes 11 Sand Bags

Step 1 Area Preparation



Remove all sods, mulches, , etc. from the court area.

Construct a nailer board using 4 x6 treated lumber around the perimeter of the concrete border.

Secure the nailer board to the concrete perimeter using a treated anchor. If installing a concrete slab construct a nailer board around the perimeter.

Drainage - Slope quarter minus or concrete slab 2%.

Step 2 Base Construction




It may be necessary to compact the native soil/subgrade prior to base construction.

Add a base of quarter minus and level it with a landscaping rake. Ideally, the base should be approximately 4" thick.

After spreading, spray with water and use a hand tamp to compact the area. This typically takes 2-3 passes. Let the compacted area dry and check for any inconsistencies in the area.

Step 3 Lay / Secure Turf

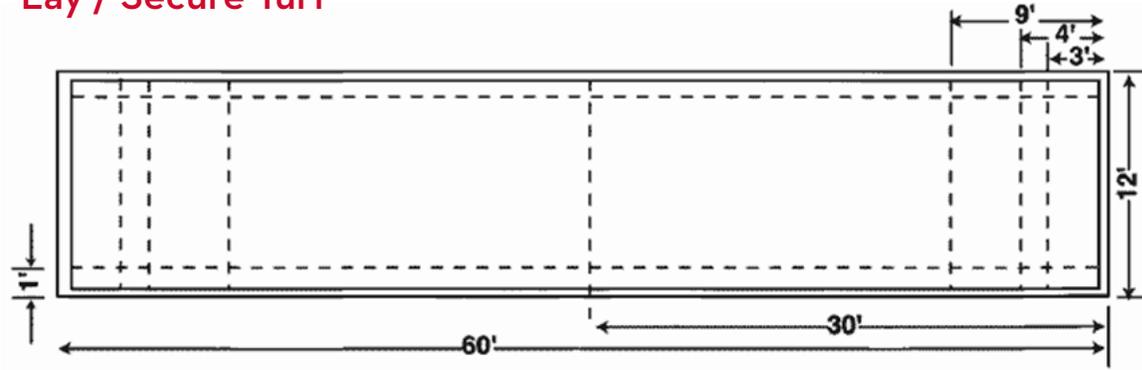

Lay the synthetic turf out on top of the constructed base as illustrated above.

Using 3 1/2" galvanized nails secure the turf to one corner of the nailer board. Using turf grippers begin stretching the turf to the opposite corner. After securing, begin to stretch the remainder of the turf around the perimeter securing the turf to the nailer board every 6"-8" tucking the turf edge 1/8" provided that there is ample material.

Use duckbill trimmers or a carpet tractor to blossom the turf around each nail.

When installing turf over a concrete slab apply Shaw 7300 full spread using a 1/8" x 1/8" x 1/8" u-notch.

Recommendations for lines - Pioneer Gameline - Aerosol Color, Max Aerosol Chalk, and Quik Stripe Chalk

Step 4 Brush



Fibers are usually matted down so use a stiff bristled broom to stand the fibers up.